



## Steps in making a Band Saw Box . . .




1. Draw, and attach design to block of wood.

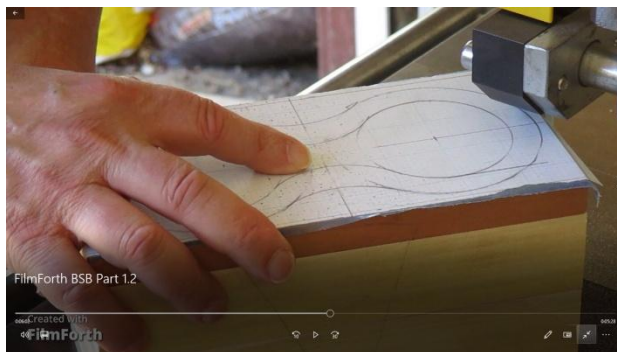


2. Cut out the box, cutting on the outside of the line.

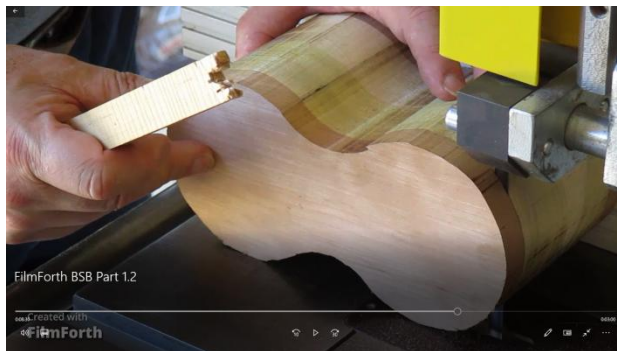

3. Cut off the back of the box.

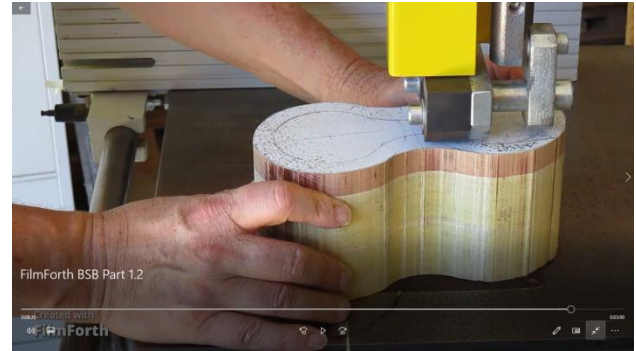


4. Cut out the drawer, cutting on the line, using a 3/8" or 1/4" blade. In choosing the entry point, best to cut with the grain.

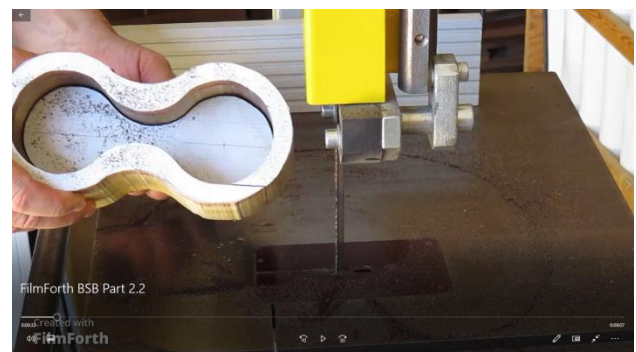


5. Glue, and clamp the outer ring of the box.




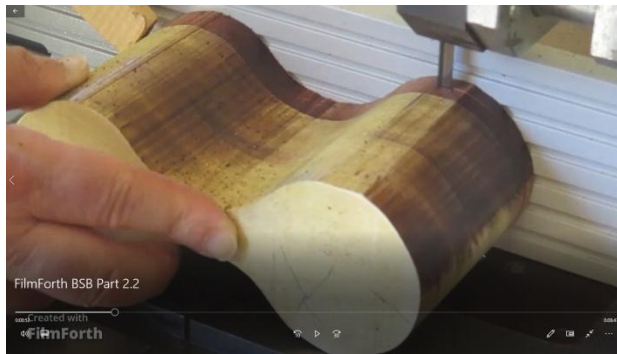

6. Cut off the front and back of the drawer.

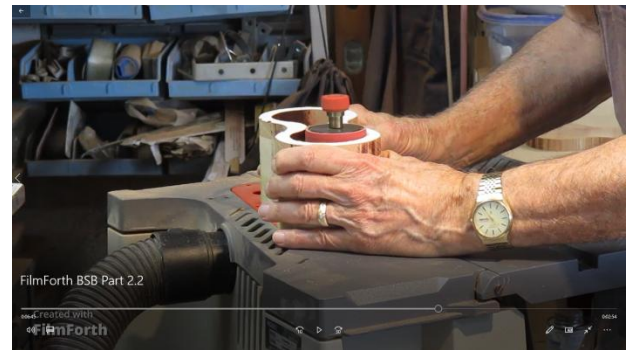


9. Sand the interior of the box.

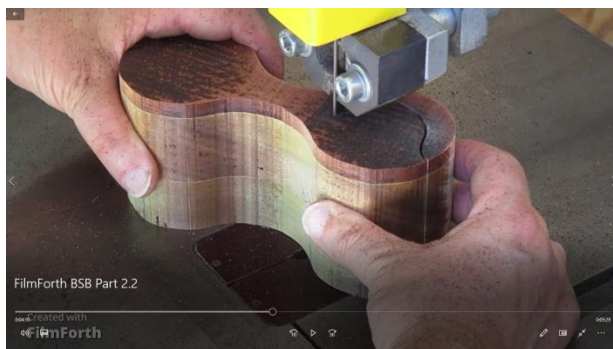

7. Cut out the interior of the drawer.



10. Finish sand the interior of the box.

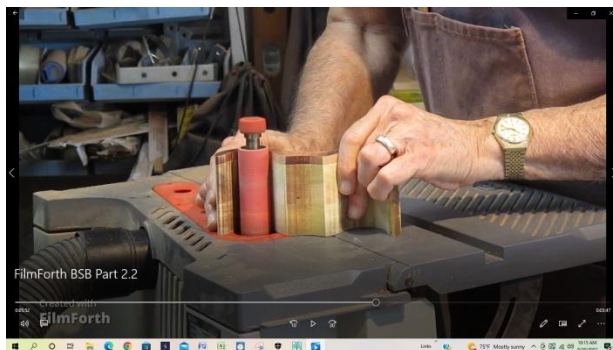


8. Sand the interior of the drawer(s), but not completely smooth




11. Glue the back on the box.




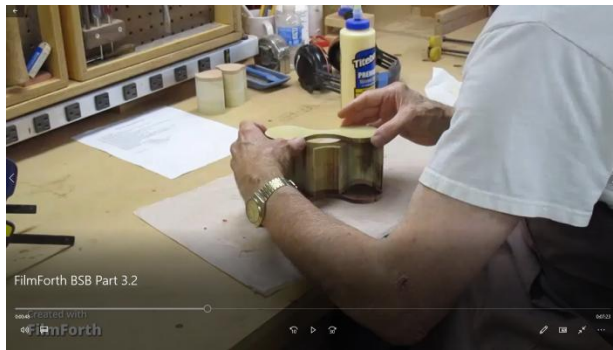

12. Glue the front, and back onto the drawer

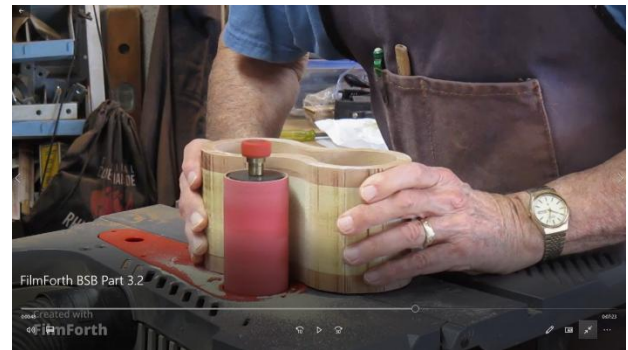


15. Sand outside of box

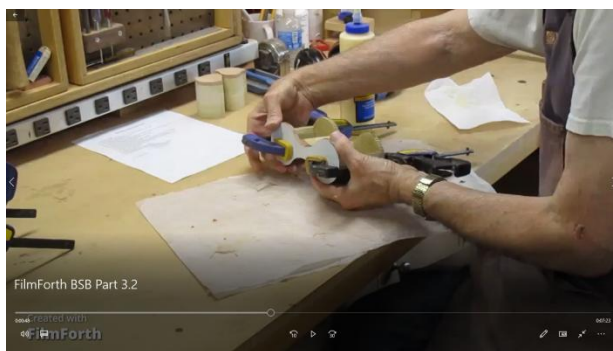


13. Clamp drawer and box.



16. Finish sand everything, but not the interior of the drawer(s)

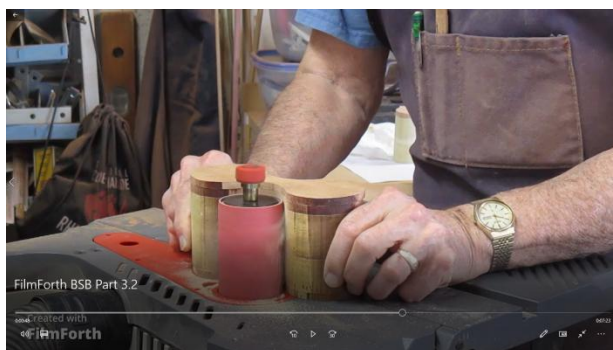


14. Sand outside of drawer

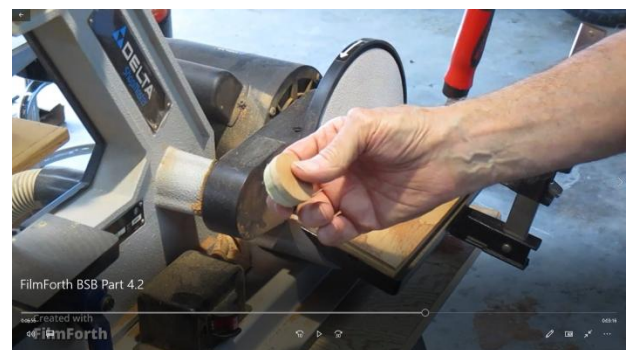


17. Make handle for the drawer



18. To flock the drawer, tape off the area that is not to be flocked

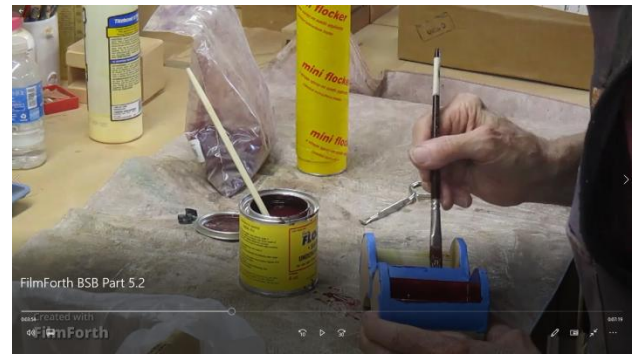


21. Apply a generous, even coat of undercoat adhesive, in the same color of the flocking fibers

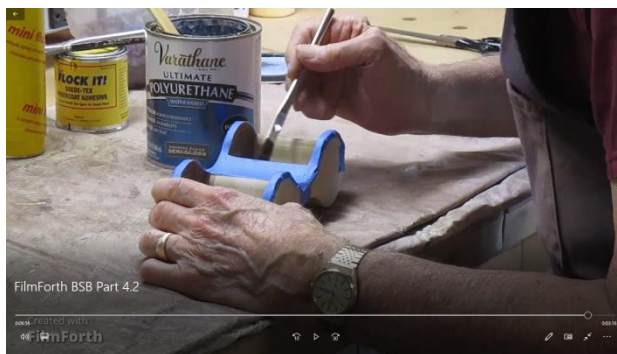

19. Seal the area to be flocked with sealer, polyurethane, or . . .



22. Spray flocking fibers, very liberally, immediately after undercoat has been applied

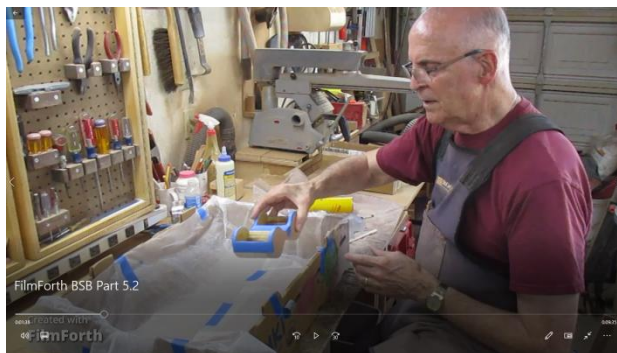

20. Line a box with wax paper, or plastic



23. After overnight drying, shake out loose fibers







24. Remove tape




27. Add finish to box and drawer

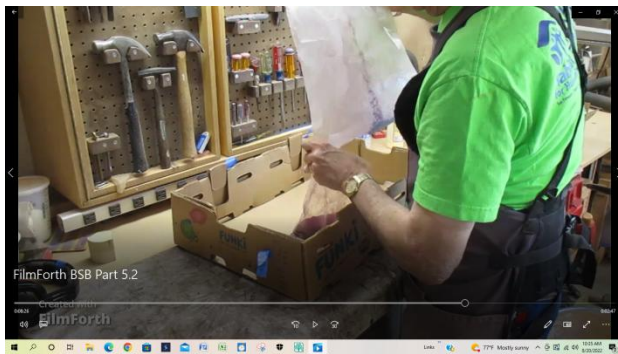

25. Save excess fibers for future use

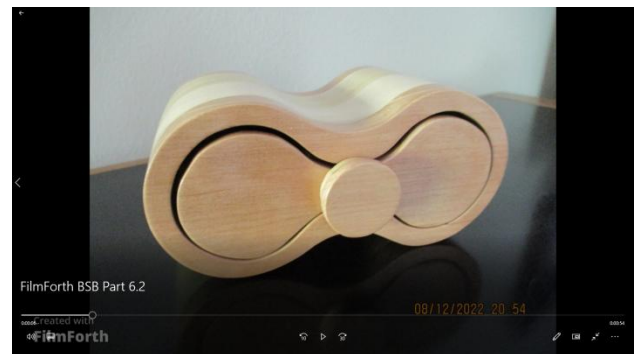

28. Enjoy using your band saw box!

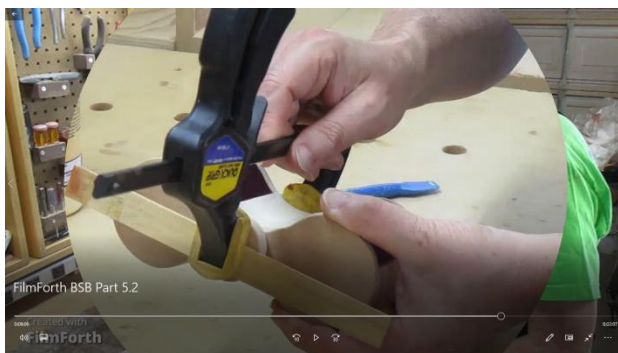

26. Attach handle to front of drawer

